
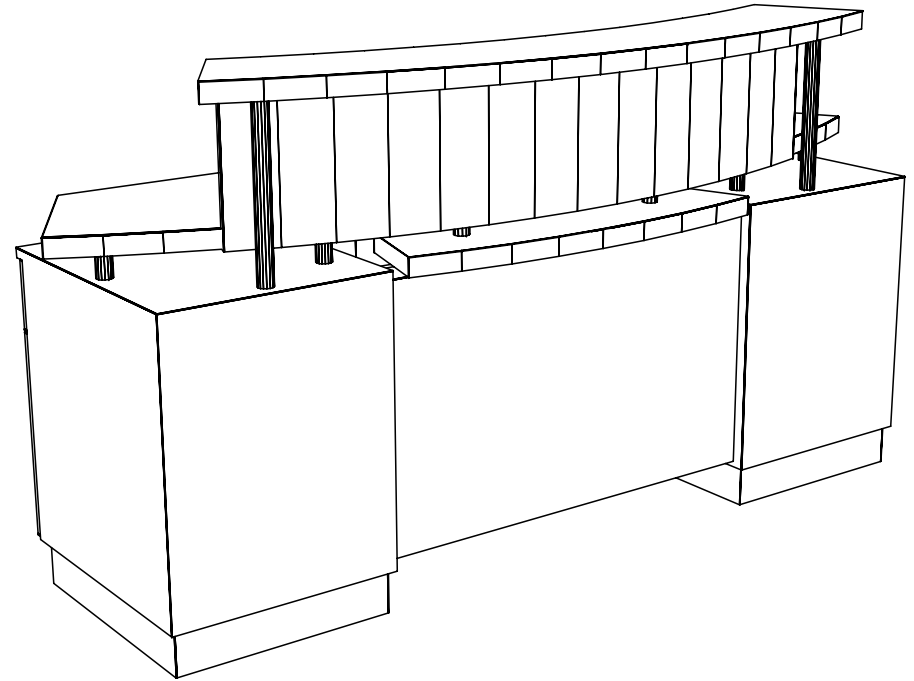


# Installation Instructions

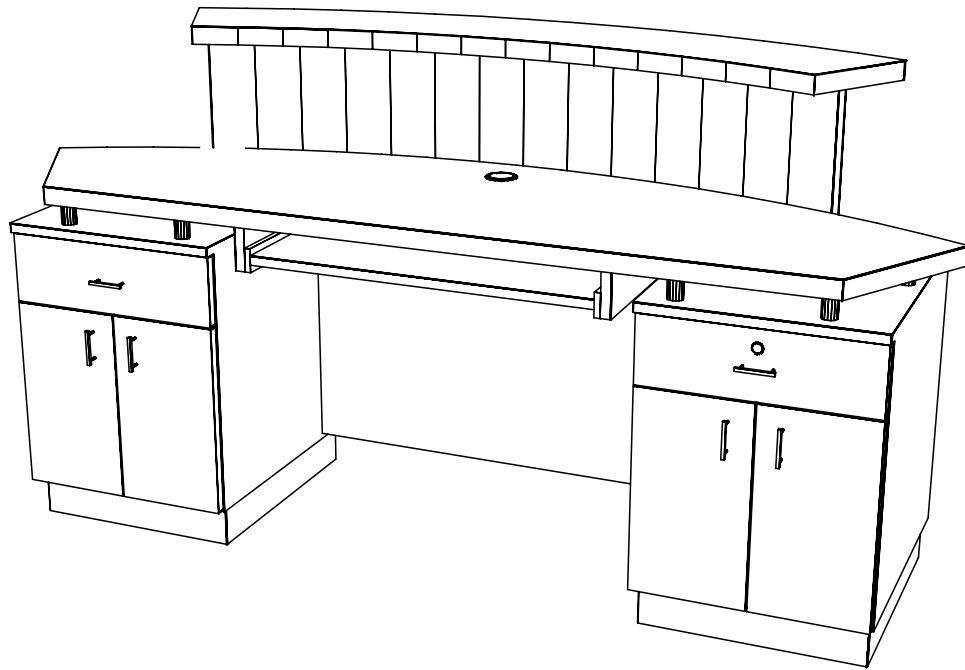

**collins** Collins Manufacturing  
809 E 20th Street  
Cookeville TN 38501

Title: **806-80-1 Soho Reception Desk**

Size: # **806-80-1**






Drawn By:

Date: **10/06/04**

Sheet #: **2**

Adjacent cabinets and components should be assembled by fastening through the interior panels with the screws or bolts provided. Tighten securely.

## Installation Instructions

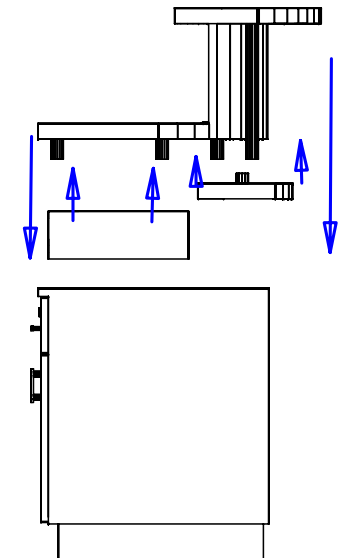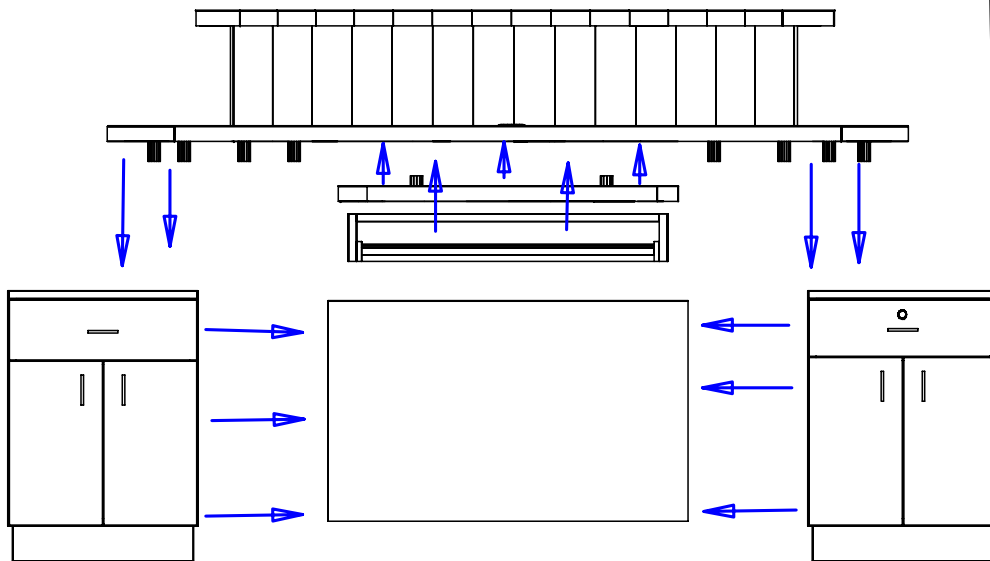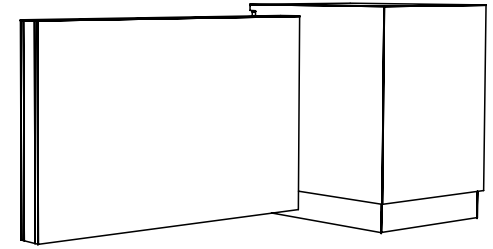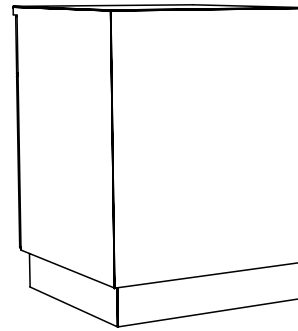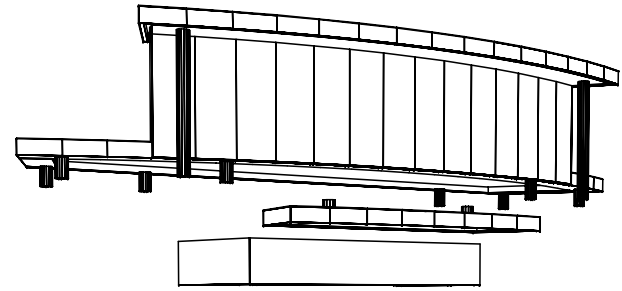

			<b>Collins Manufacturing</b> 2000 Bowser Rd. Cookeville TN 38506
Title: <b>806-80-1 Soho Reception Desk</b>			
Size:	#: <b>806-80-1</b>	Drawn By:	
Date: <b>10/06/04</b>	Sheet #: <b>3</b>		